





Thrust Bearing Kits

Bearing kits are placed between the coil spring and the adjuster nut to reduce friction when making adjustments. Kits are recommended for preloaded spring assemblies or when springs require adjustment while they are under pressure. Kits include one bearing and two races.

Part No.	Description
ALL64210	2.5" Kit (2.5" I.D. x 3.25" O.D.)
ALL64212	3" Kit (3.025" I.D. x 3.730" O.D.)
ALL64214	5" Kit (4.150" I.D. x 5.045" O.D.)

