



Valve Stem Cores

Inner portion of the valve stem which is often damaged or leaking. Cores are easy to replace with ALL44030 tool when replacing tires to assure a leak free valve stem. Universal design fits most standard valve stems.

Part No.	Quantity
ALL99150	.10-Pack
ALI 99150-100	100-Pack

