

Spark Plug Gap Tool

Tool properly cradles the spark plug to consistently set plug gaps using a standard feeler gauge. Insert plug into holder, place desired thickness of feeler gauge between ground strap and electrode then gently turn the knob until feeler gauge is snug.

