



Part No. **ALL10105**
ALL10106
ALL44026
ALL44027
ALL44028

Bead Breakers

Convenient tool makes quick work of breaking down even the most stubborn tire beads. Durable steel construction with rubber hand grips. Clamp the hook and inside jaw against the rim, while maintaining slight pressure on the outside handle, then press down on the inside handle, using the outer jaws to separate the tire from the rim, moving around the rim as needed.

Part No. **Description**

- ALL44026.....Bead Breaker for 10" Wheels
- ALL44027.....Bead Breaker for 13" Wheels
- ALL10105.....Bead Breaker for 15" Wheels
- ALL10106.....Bead Breaker for 15" Wheels Wide Jaw*
- ALL44028.....Bead Breaker w/Adjustable Arm for 10", 13" and 15" Wheels

*Wide jaw bead breaker works well with soft sidewall tires, helping prevent damage to sidewall.



ALL10105



ALL44028



ALL10106



ALL44026



ALL44027

Wide Jaw



Standard

REV081021

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com