



Part No. **ALL40208**

## Fuel Line Check Valve

### **ALL40208**

Valve is placed in-line near the fuel cell to prevent fuel from free-flowing in the event of an accident that damages the fuel pump or fuel line. The suction action of the fuel pump overrides the internal spring which opens the valve allowing fuel to flow without restriction. Valve accepts -10 ORB style fittings.



#### **Related Components:**

- ALL49838.....6AN to -10 ORB Fitting
- ALL49843.....8AN to -10 ORB Fitting
- ALL49848.....10AN to -10 ORB Fitting
- ALL49853.....12AN to -10 ORB Fitting

**Allstar Performance 8300 Lane Dr., Watervliet, MI 49098**  
**Phone: (269) 463-8000 Fax: (800) 772-2618 [www.allstarperformance.com](http://www.allstarperformance.com)**