



ALL80138

FUSED SWITCH PANEL

Individual Power Supply To Components
(i.e. Electric Fuel Pump, Electric Cooling Fan, Lights, etc.)



Main Panel Power Supply -
Connect Directly To Battery
Or Switched Side Of Master
Disconnect Switch

Starter Solenoid Trigger

Indicator Light Ground Wires -
Connect Directly To Chassis Ground

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com