




Part No. ALL31064
ALL31066

Pulley Shim Kits

Use shim kits to properly align pulleys. Water pump shims have dual bolt hole pattern to fit most GM and Ford water pumps. Crank pulley spacers are for small block Chevys.

ALL31064.....Water Pump Kit, 1/16", 1/16", 1/8"

ALL31066.....Crankshaft Kit, 1/16", 5/64", 1/8"

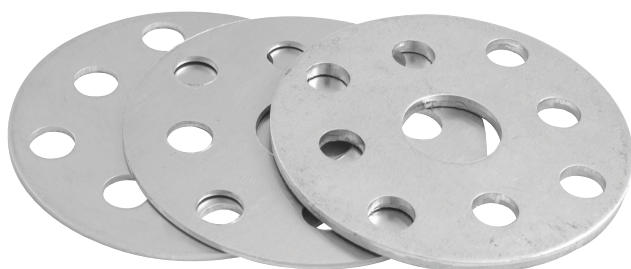

ALL31064



ALL31066