



Part No. ALL18985-18986

Body Reinforcing Plates

Plates help protect fiberglass and aluminum panels from cracking when using 7/16" quick turn fasteners. Stainless Steel plates are precision stamped with a strengthening border, attach with 1/8" rivets, and measure 2" wide x 1" tall.

Finish	10-Pack	50-Pack
Clear	ALL18985	ALL18985-50
Black	ALL18986	ALL18986-50

1-17/32"
CTC



Underside View



ALL18985
ALL18985-50



ALL18986
ALL18986-50


Quick Turn Fastener Measurement Guidelines

To find [A] Fastener Length, add together [B] Spring Reach and [C] Material Thickness [including bracket if applicable]. $A=B+C$

Quick Turn Fastener Selection

- Determine the total thickness of the panels being joined including mounting brackets and the space between the panels, if any.
- Select the proper body length and spring height combination which provides the proper thickness range.

		Fastener Length "A"					
		.400"	.450"	.500"	.550"	.600"	
Spring Length "B"	1" Springs	Total Material Thickness "C"					
	.250"	.165"-.200"	.215"-.250"	.265"-.300"	.315"-.350"	.365"-.400"	
	.325"	.098"-.133"	.148"-.183"	.198"-.233"	.248"-.283"	.348"-.383"	
	1-3/8" Springs	.325"	.105"-.148"	.155"-.198"	.205"-.248"	.255"-.298"	.355"-.398"
	.375"	.055"-.098"	.105"-.148"	.155"-.198"	.205"-.248"	.305"-.348"	
	.425"	.005"-.048"	.055"-.098"	.105"-.148"	.155"-.198"	.255"-.298"	

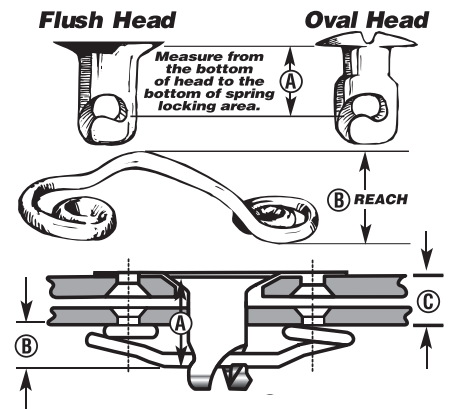

REV040720