



Part No. ALL19296-19338

Quick Turn Springs

	10-Pack Part No	50-Pack Part No
1-3/8" (.090" Wire Diameter)		
.325" Reach	ALL19320	ALL19322
.375" Reach	ALL19330	ALL19332
.425" Reach	ALL19336	ALL19338
1" (.080" Wire Diameter)		
.250" Reach	ALL19300	ALL19302
.325" Reach	ALL19310	ALL19312
3/4" (.062" Wire Diameter)		
.200 Reach	ALL19296	ALL19298




Quick Turn Fastener Measurement Guidelines

To find [A] Fastener Length, add together [B] Spring Reach and [C] Material Thickness [including bracket if applicable]. $A=B+C$

Quick Turn Fastener Selection

- Determine the total thickness of the panels being joined including mounting brackets and the space between the panels, if any.
- Select the proper body length and spring height combination which provides the proper thickness range.

		Fastener Length "A"					
		.400"	.450"	.500"	.550"	.600"	
Spring Length "B"	1" Springs		Total Material Thickness "C"				
	.250"		.165"-.200"	.215"-.250"	.265"-.300"	.315"-.350"	.365"-.400"
	.325"		.098"-.133"	.148"-.183"	.198"-.233"	.248"-.283"	.348"-.383"
	1-3/8" Springs						
	.325"		.105"-.148"	.155"-.198"	.205"-.248"	.255"-.298"	.355"-.398"
	.375"		.055"-.098"	.105"-.148"	.155"-.198"	.205"-.248"	.305"-.348"
.425"		.005"-.048"	.055"-.098"	.105"-.148"	.155"-.198"	.255"-.298"	

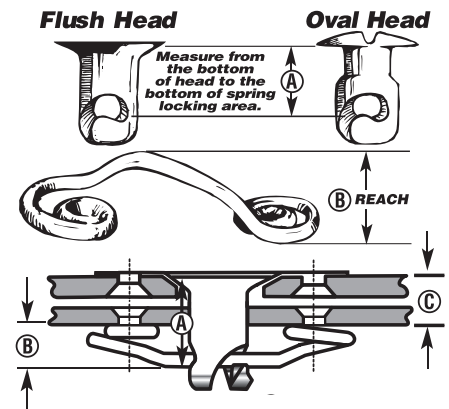

REV040720