




Part No. ALL19410

Quick Turn Starter Kit

Not sure where to start when using quick turn fasteners? Use this kit as a starting point to determine correct fasteners for application. Kit includes two different lengths of Allstar's most popular oval head 7/16" fasteners (five ALL19280 and five ALL19286), ten ALL19330 springs and twenty-five multi-grip rivets.



| | | Fastener Length "A" | | | | | |
|-------------------|----------------|------------------------------|-------------|-------------|-------------|-------------|-------------|
| | | .400" | .450" | .500" | .550" | .600" | |
| Spring Length "B" | 1" Springs | Total Material Thickness "C" | | | | | |
| | .250" | .165"-.200" | .215"-.250" | .265"-.300" | .315"-.350" | .365"-.400" | |
| | .325" | .098"-.133" | .148"-.183" | .198"-.233" | .248"-.283" | .348"-.383" | |
| | 1-3/8" Springs | .325" | .105"-.148" | .155"-.198" | .205"-.248" | .255"-.298" | .355"-.398" |
| | .375" | .055"-.098" | .105"-.148" | .155"-.198" | .205"-.248" | .305"-.348" | |
| | .425" | .005"-.048" | .055"-.098" | .105"-.148" | .155"-.198" | .255"-.298" | |

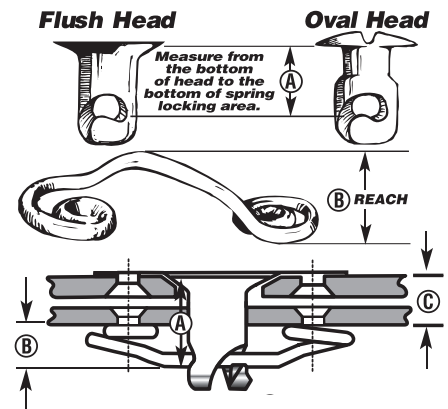

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
 Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com

REV040720