

Quick Turn Fastener Insert Plates

Insert plate directly replaces the quick turn spring, allowing panels to be bolted together. May also be used as a blind nut on a panel with limited access. Inserts have 1/4"-20 threads and are typically riveted to the backside of a panel or bracket with 1/8" rivets.

Insert Plate	2pk	10pk	50pk	
1"	ALL19420	ALL19420-10	ALL19420-50	
1-3/8"	ALL19422	ALL19422-10	ALL19422-50	








Quick Turn Fastener Measurement Guidelines

To find [A] Fastener Length, add together [B] Spring Reach and [C] Material Thickness [including bracket if applicable]. A=B+C

Quick Turn Fastener Selection

- Determine the total thickness of the panels being joined including mounting brackets and the space between the panels, if any.
- Select the proper body length and spring height combination which provides the proper thickness range.

		Fastener Length "A"						
		.400"	.450"	.500"	.550"	.600"		
Spring Length "B"	1" Springs	Total Material Thickness "C"						
	.250"	.165"200"	.215"250"	.265"300"	.315350"	.365"400"		
	.325"	.098"133"	.148"183"	.198"233"	.248"283"	.348"383"		
	1-3/8" Springs							
	.325"	.105"148"	.155"198"	.205"248"	.255"298"	.355"398"		
	.375"	.055"098"	.105"148"	.155"198"	.205"248"	.305"348"		
	.425"	.005"048"	.055"098"	.105"148"	.155"198"	.255"298"		

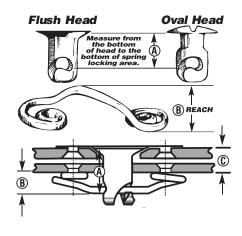

REV080618 REV040720