



ALL55220 Torque Ball Safety Blanket

INSTALLATION INSTRUCTIONS

Installation Instructions:

Blanket mounts to the rear engine plate using the lower mounting holes for the lightweight style blocks as shown below or by using the provided mounting studs and nuts. Allstar rear engine mount plates have the lightweight block provisions for mounting the blanket but if your plate does not, follow the Mounting Stud Installation Instructions below.

Mounting Stud Installation Instructions

1. Locate (2) holes 10" on center. Holes should be centered from center of bell housing opening.
2. Use a center punch to prevent drill bit from walking during drilling then drill (2) holes with 5/16" drill bit.
3. Tap both holes all the way through using a 3/8"-16 tap. Use tap oil or WD-40 as cutting fluid.
4. Clean threads to remove oil residue.
5. Apply blue Loctite to (2) included studs and thread into motor plate until studs bottom out.

Blanket Installation Instructions


1. Wrap blanket around bellhousing and torque tube assembly then firmly press Velcro together.
2. Thread straps through buckles and pull tight.
3. Fasten mounting brackets using the engine mounting bolts or over studs and install (2) aluminum 3/8"-24 nuts included. Tighten nuts with brackets horizontal (slots for retaining straps will be vertical).
4. * Pull side straps tight until bag fits firmly against firewall.

*** Note: IT IS VERY IMPORTANT THAT BAG FITS TIGHT AGAINST FIREWALL TO FULLY PROTECT DRIVER!**

Replacement Parts Available:

ALL55224..... Mounting Stud Kit

ALL55226..... Mounting Bracket Kit, 1-Pair

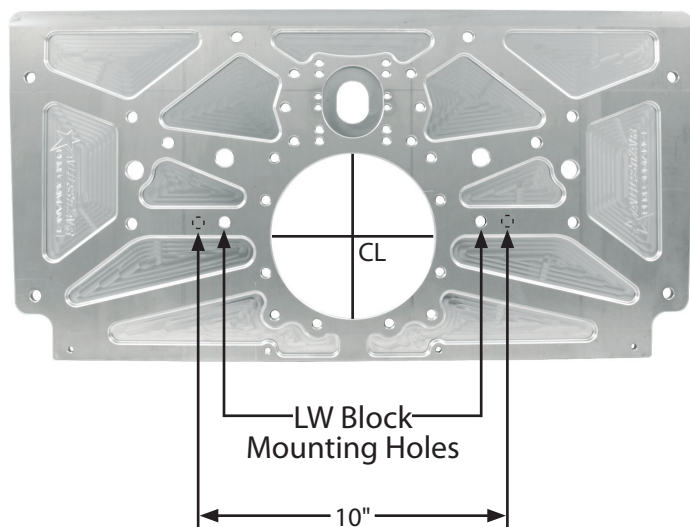

**Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com**