



# Quick Turn Starter Kit

## TECH TIPS

### Determining Fastener Length Needed:

Measure the combination of the panels (and any additional material, bracket or space between panels) to be fastened together (**C**) and the spring reach or overall height (**B**), these two measurements added together should be equal to the fastener length needed.


**Note:** Choose a shorter fastener length than the dimension of **B** plus **C** for a tighter fitting fastener.

### Determining Spring Reach Needed:

Measure fastener length (**A**) being used and subtract the combination of the panels (and any additional material, bracket or space between panels) to be fastened together (**C**) and this should give you the correct spring reach listed.

**Note:** Choose a longer reach spring than the dimension of **A** minus **C** for a tighter fitting fastener.

		Fastener Length "A"				
		.400"	.450"	.500"	.550"	.600"
Spring Length "B"	Total Material Thickness "C"					
	1" Springs					
	.250"	.165"-.200"	.215"-.250"	.265"-.300"	.315"-.350"	.365"-.400"
	.325"	.098"-.133"	.148"-.183"	.198"-.233"	.248"-.283"	.348"-.383"
	1-3/8" Springs					
	.325"	.105"-.148"	.155"-.198"	.205"-.248"	.255"-.298"	.355"-.398"
	.375"	.055"-.098"	.105"-.148"	.155"-.198"	.205"-.248"	.305"-.348"
.425"	.005"-.048"	.055"-.098"	.105"-.148"	.155"-.198"	.255"-.298"	

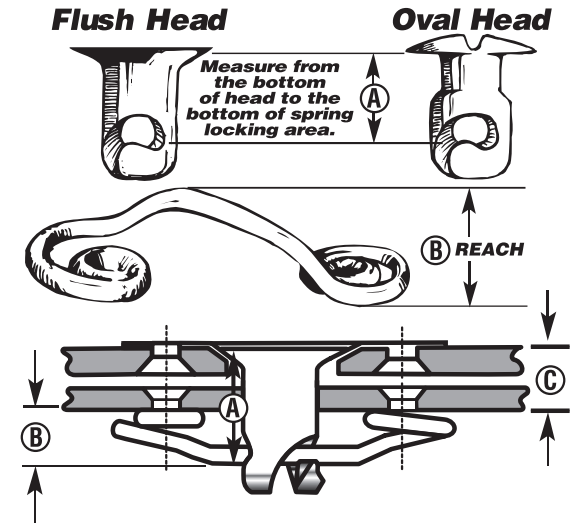

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098  
 Phone: (269) 463-8000 Fax: (800) 772-2618 [www.allstarperformance.com](http://www.allstarperformance.com)